

4-LINE LCD KEYPAD



FEATURES

- Menu driven interface
- 4-line Backlit LCD display
- Quick arm / disarm keys
- 500-entry Event-Log


FULL USER MANUAL

You can download the complete user manual using this QR code:



www.jva-fence.com/4line

INSTALLATION

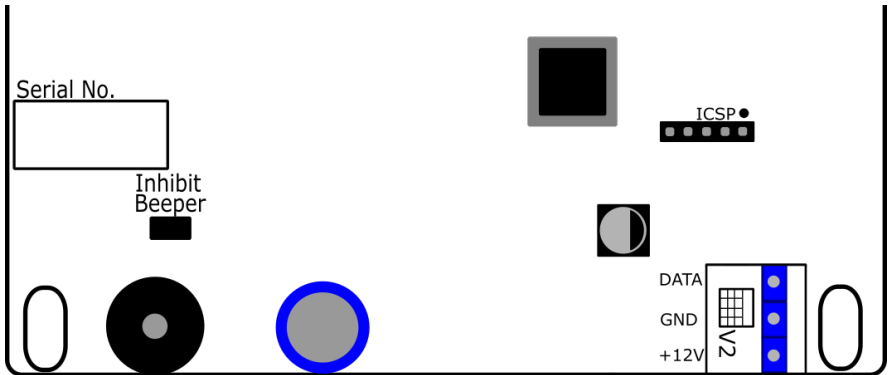




Connect +12V, GND and DATA to an Energizer or Monitor.



Default User PIN - 1234

Default Installer PIN - 012345

Button	Function
	Site Arm. Press this followed by your user PIN to arm the site
	Site Disarm. Press this followed by your user PIN to disarm the site
	Menu. Press this followed by your user/installer PIN to access the keypad menu

Changing the User PIN:

Enter the current User PIN followed by *0#.

Enter the new User PIN followed by #*#.